

# Pottery barn kids

 
## Sling Chair

**CAUTION :** Adult assembly required. This item contains small parts in the unassembled state and care should be taken in the unpacking and assembly of the product.

### PRE-ASSEMBLY:

- Read all instructions before beginning assembly. The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- For your safety and ease, assembly by two adults is recommended.
- Remove all part and hardware from the box and lay out on a clean, carpeted, or scratch- free work surface. Use care as some parts or hardware may have sharp points or edges.
- Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts and hardware.
- Use the parts and hardware lists to identify and separate each of the pieces included.
- Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts misalign during assembly.
- The use of power tools for assembly is not recommended. Power tools can damage hardware or split wood.

### Parts included:

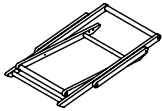

(1) Sling Chair - A



(1) Canvas - G

### Hardware included :



(4) 3/4" Bolt - B



(1) Stick - C



(2) Stator - D




(2) 1" Bolt - E




(1) Allen Wrench - F

### Assembly Instruction :


Step 1: Place Sling Chair (A) on a soft, smooth surface. Uninstall the rails, using Allen Wrench (F). (See Fig. 1 & Fig. 2) Do not throw away the hardware.

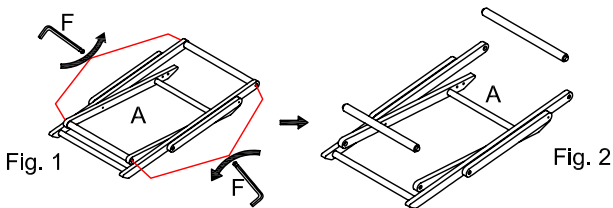


Step 2: Insert each uninstalled rail into the Canvas (G), then attach each rail back to Sling Chair (A) using Bolts and Allen Wrench (F). (See Fig. 3 & Fig. 4)

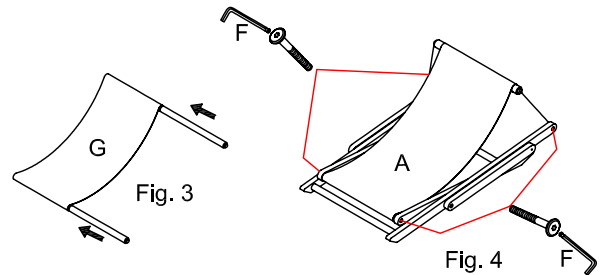


Step 3: Attach each Stator (D) to Sling Chair (A) using Bolts (B) and Allen Wrench (F). (See Fig. 5)

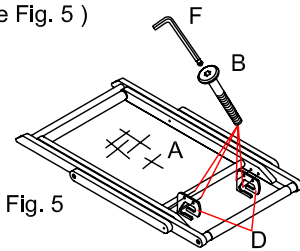


Step 4: Attach Stick (C) to Sling Chair (A), using Bolts (E) and Allen Wrench (F). (See Fig. 6)

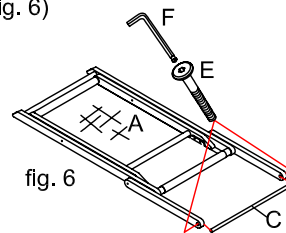

Step 5: Unwrap Sling Chair (A). (See Fig. 7)

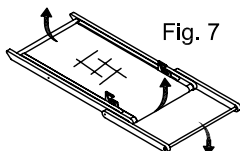

Step 6: The assembly is now complete. (See Fig. 8)

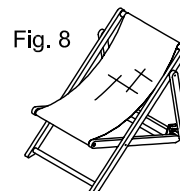

### CARE INSTRUCTIONS :

- For daily care wipe with a soft dry cloth. Wipe spills with clean, dry cloth. Avoid the use of harsh cleaners and abrasive.
- Should the finish of outdoor furniture change year over year, apply teak oil or your choice of furniture stain to restore the natural luster and beauty of the wood. For maximum results, we recommend carefully following the labeled instructions for correct applications of the teak oil or furniture stain you choose to purchase.
- Store in a dry, covered area when not in use.
- For fabric: spot clean only with a damp white cloth. Blot to remove excess water. Air dry

Thank you for your purchase  
stores / catalog / [www.potterybarnkids.com](http://www.potterybarnkids.com)  
1.800.290.8181