

pottery barn kids restaurant high chair



WARNING: Prevent serious injury or death from falls or sliding out.

- Always secure child in the restraint.
- Never leave child unattended.
- Always keep child in view while in high chair.
- The child should be secured in the high chair at all times by restraining system.
- If the high chair comes with a tray, the tray is not designed to hold the child in the chair.
- It is recommended that the high chair be used only by children capable of sitting upright unassisted.



MISE EN GARDE: Prévenez les blessures graves ou la mort provoquées par les chutes ou les glissements vers l'extérieur.

- Toujours attacher l'enfant.
- Ne jamais laisser l'enfant sans surveillance.
- Toujours garder l'oeil sur l'enfant lorsqu'il est dans la chaise haute.
- L'enfant doit toujours être attaché dans la chaise haute avec un système de contention.
- Si un plateau est compris avec la chaise haute, le plateau n'est pas conçu pour maintenir l'enfant dans la chaise.
- Il est recommandé que la chaise ne soit utilisé que par des enfants capable de s'asseoir convenablement sans aide.

CAUTION: Adult assembly required. This item contains small parts in the unassembled state and care should be taken in the unpacking and assembly of the product.

PRE ASSEMBLY:

- Please read all instructions before beginning assembly.
- We recommend adult assembly by two people.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts of hardware.

PARTS INCLUDED:

- (A) Side Frame - 2 pcs
- (B) Lower Stretcher - 2 pcs
- (C) Front Stretcher - 1 pc
- (D) Seat Panel - 1 pc
- (E) Backrest Panel - 1 pc

HARDWARE ENCLOSED:


- (F) Screw 1 ½" - 10 pcs

TOOLS REQUIRED:

Phillips screwdriver (not included)

ASSEMBLY INSTRUCTIONS:

1. Insert the right side of the Seat Panel (D) into the groove on the Side Frame (A).
2. Secure the connection using screw (F), tightening fully with the screwdriver (not included).
3. Repeat Steps 1 and 2 for the Lower Stretcher (B), Front Stretcher (C) and Backrest Panel (E).
4. Ensure the safety belt is completely hanging down, and attach the left side of the Lower Stretcher (B), Front Stretcher (C) and Backrest Panel (E) to the groove on the Side Frame (A')
5. Repeat Step 2 to complete assembly.

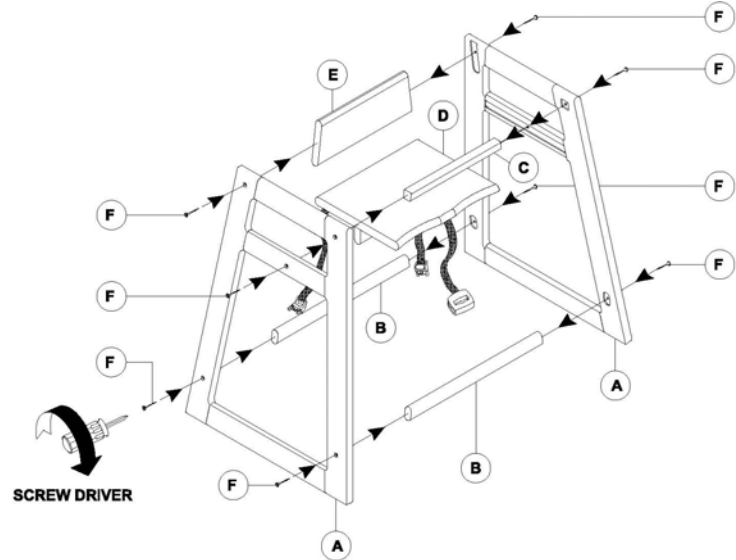

CARE INSTRUCTIONS

- For daily care wipe with a soft dry cloth. Wipe spills with clean, dry cloth. Avoid the use of harsh cleaners and abrasive.
- Store in a dry covered area when not in use.

Thank you for your purchase
stores | catalog | www.potterybarnkids.com
USA 1.800.290.8181

