pottery barn kids CHESAPEAKE SQUARE LOUNGE FRAME

PRE-ASSEMBLY:

- Read all instructions before beginning assembly. The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- For your safety and ease, assembly by two adults is recommended.

(2) (2)

(2)

(7)

- Remove all part and hardware from the box and lay out on a clean, carpeted, or scratch- free work surface. Use care as some parts or hardware may have sharp points or edges.
- Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts and hardware.
- Use the parts and hardware lists to identify and separate each of the pieces included.
- Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts misalign during assembly.
- The use of power tools for assembly is not recommended. Power tools can damage hardware or split wood.

PARTS INCLUDED:

 
- (A) Side Rails
- (B) Front / Back Rails
- (C) Center rail
- (D) Slats

HARDWARE INCLUDED:

- (E) Bolt 40mm (8) (0)
- (F) Screws ø8 x 31.75mm (23)
- (G) 4mm Allen Key (1)
- (H) U-Shaped Metal connector (2)


TOOLS REQUIRED:

Phillips head screwdriver (not included)

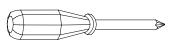


ASSEMBLY INSTRUCTIONS:


1. Place Front/Back Rails (B), Side Rails (A), and Center Rail (C) upside down, as shown in Fig. 1. Secure the Front/Back Rails (B) to the Side Rails (A) using (8) Bolts (E).

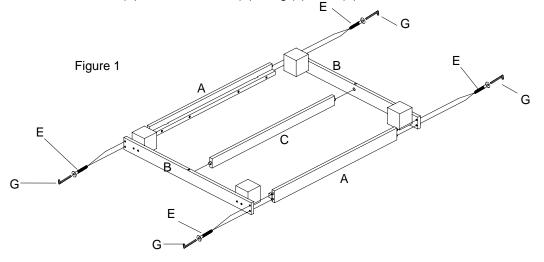


2. Secure the Center Rail (C) to the Front/Back Rails (A) with Screws (F), using Philips Head Screwdriver as shown in Fig. 2.

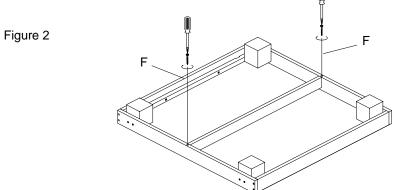

3. Turn the lounge frame upright. Secure the Slats (D) to the frame with Screws (F), using Philips Head Screwdriver. Tighten all screws and bolts.

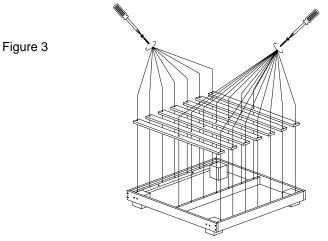

4. Two or more Square Lounge Frames can be joined together, if desired, using (2) U-Shaped Metal Connectors (H) as shown.

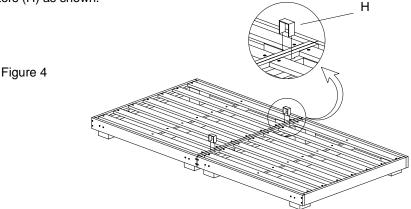

CARE INSTRUCTIONS:

- For daily care wipe with a soft dry cloth. Blot Spills immediately and wipe with a clean dry cloth.
- Store in a dry, covered area when not in use.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish.
- Over time, the product may begin to gray. To nourish the wood, wash with soap and water. When dry, apply a coating of teak oil with a clean cloth. Remove excess oil by blotting with a soft, clean cloth.

Thank you for your purchase Stores I catalog I <u>www.potterybarnkids.com</u> USA 1.800.290.8181