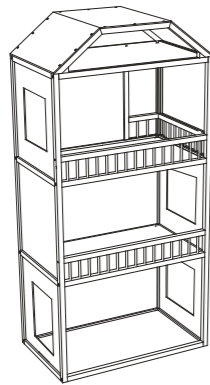 


Woodbury doll house

Maison de poupée
Woodbury



⚠ WARNING:
This toy requires adults assembly.
Loose parts pose potential sharp points and choking hazards for children under 3 years.
Pls keep away from children's reach until fully assembled.
Do not use power tools or over tighten which may result in wood splitting or cracking.
Assembly requires 2 adults.

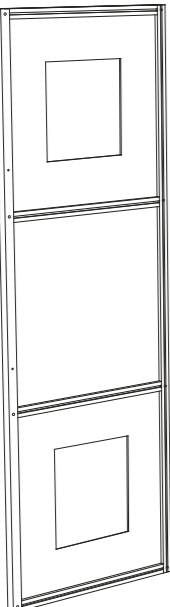 
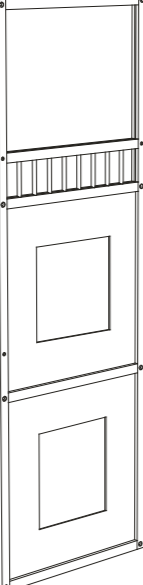 
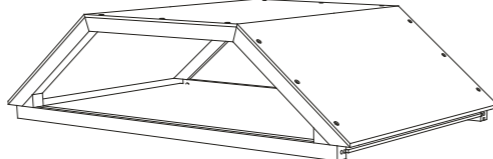 
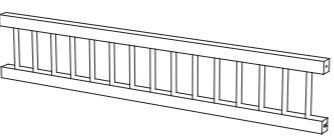 
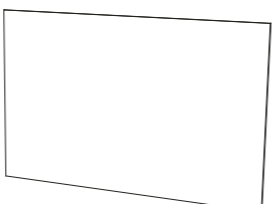 
 
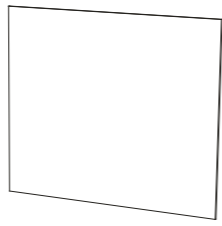 
 

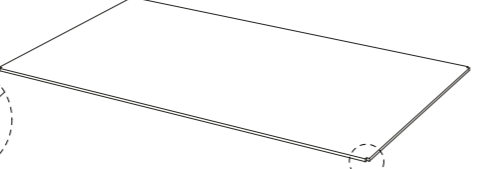 
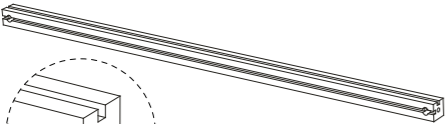 
 


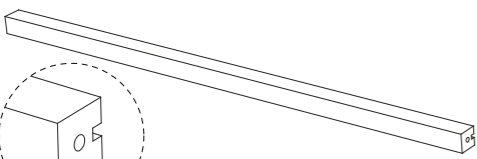 
 
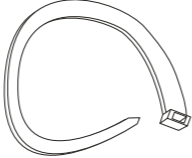 


**3 years +
3 ans et plus**

⚠ MISE EN GARDE
Ce jouet nécessite d'être assemblé par un adulte.
Les pièces non assemblées posent un danger avec leurs pointes aiguës et un risque d'étouffement pour les enfants de 3 ans et moins.
Conserver hors de la portée des enfants jusqu'à ce que l'assemblage soit terminé.
Ne pas utiliser d'outils électriques ou de trop serrer, car ceci pourrait faire fendre ou craquer le bois.
L'assemblage nécessite 2 adultes.

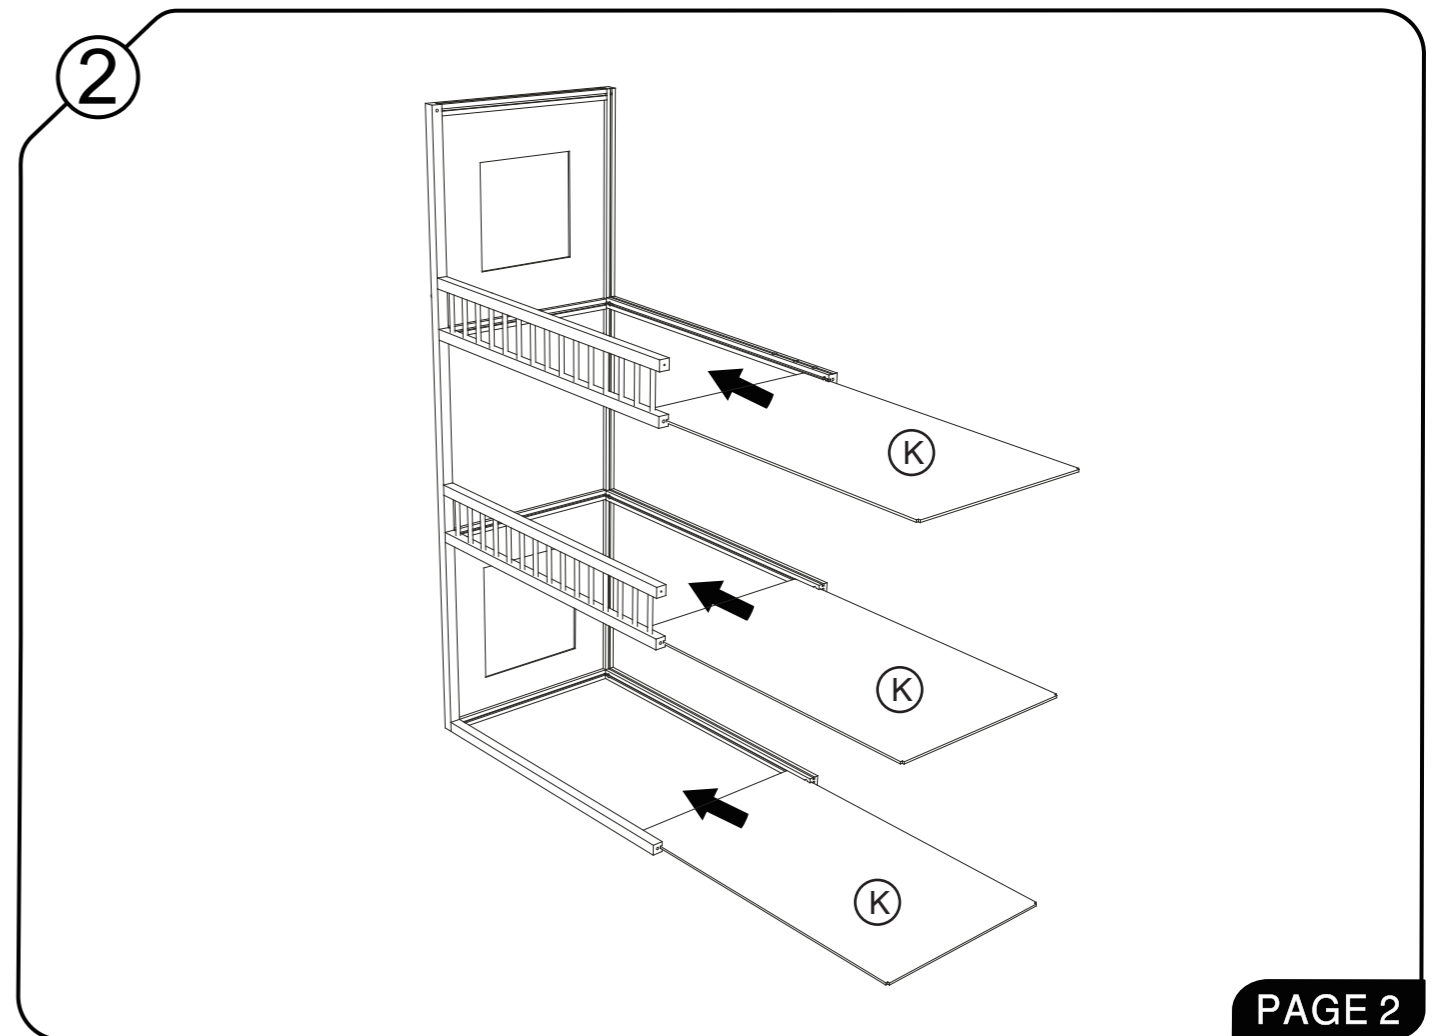 
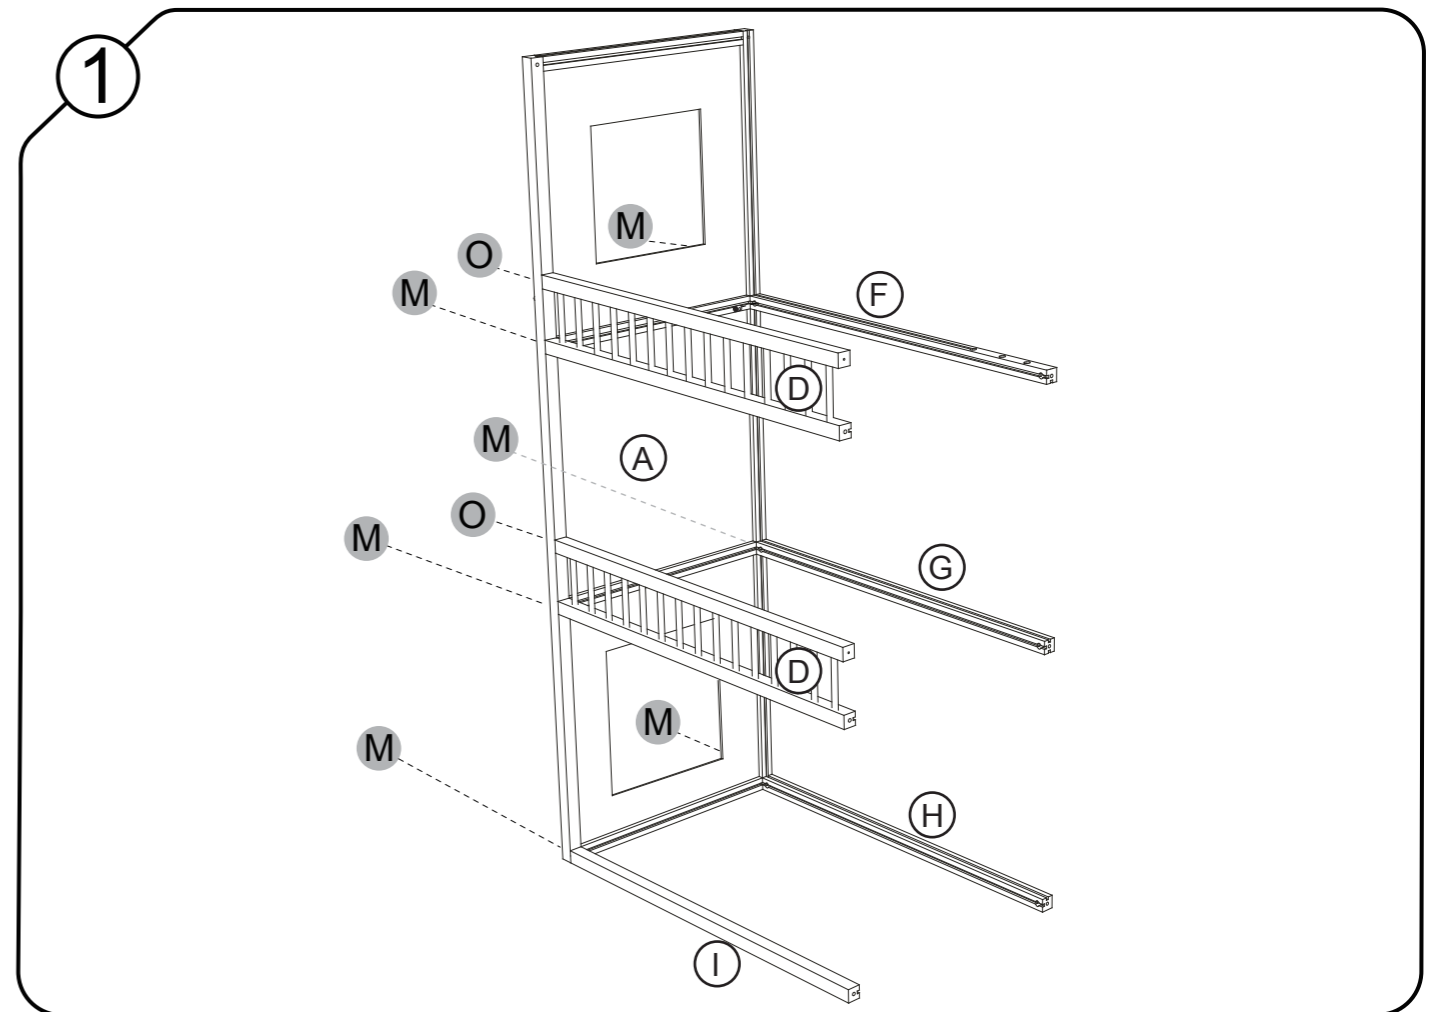 
**Contents
Contenu**

NOTE: Please read instructions before starting to assemble
Note: Veuillez lire les instructions avant de commencer l'assemblage.



A 	B 	C  x1
		D  x2
		E  x2
F  x1	J  x1	L  x1
G  x1	K  x3	
H  x1	M  x16	N  x1
	O  x4	
I  x1	P  P1 x4	P2  P2 x2
	 P3 x4	 P4 x4

PAGE 1



PAGE 2

