
# pottery barn kids

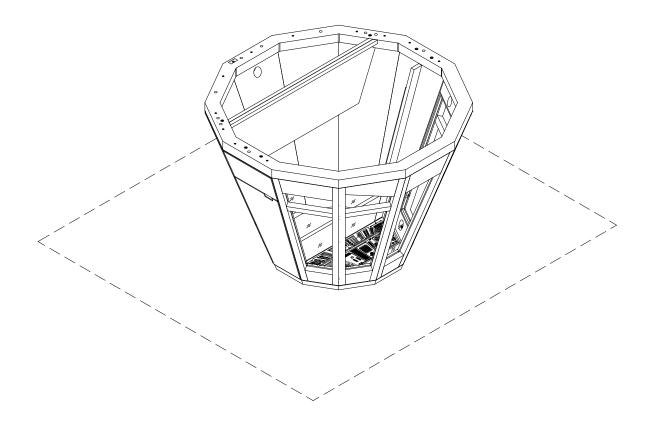

STAR WARS BED (Part 1 of 2)

Please follow strickly this assembling instruction to prevent this bed from damage or misalignment.

www.potterybarnkids.com

Date: 2015-Jun.-18

Rev: Page 1 of 7

#### **Important Safety Instructions:**


- Please read all instructions carefully before assembling.
- For your safety, assembly by four or more adults is strongly recommended.
- Keep these instructions for future use.
- Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.

## Pre-assembly:


- Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- To avoid accidentally discarding small parts or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage the hardware and split the wood.
- Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.

#### Parts Included:

- (A1) Footboard small loop (x1)
- (A2) Footboard Left Barrel (x1)
- (A3) Footboard Right Barrel (x1)
- (A4) Footboard big loop (x1)

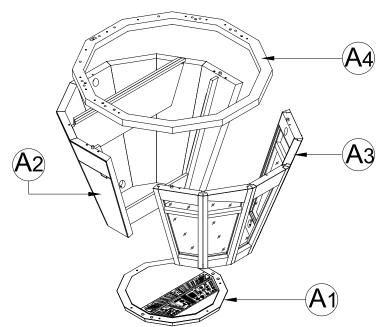

#### Hardware Included:

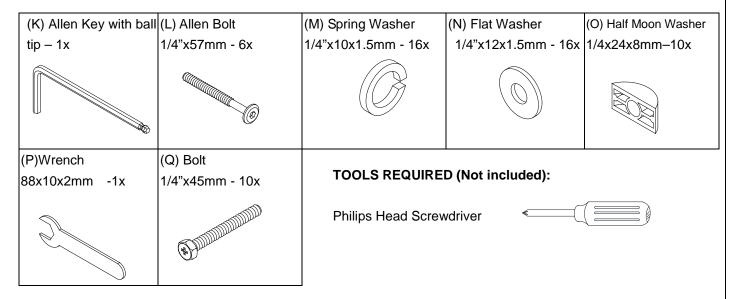


Date: 2015-Jun.-18


Rev: Page 2 of 7

# **ASSEMBLY INSTRUCTIONS**

1. Remove the carton, as seen in the illustration below.

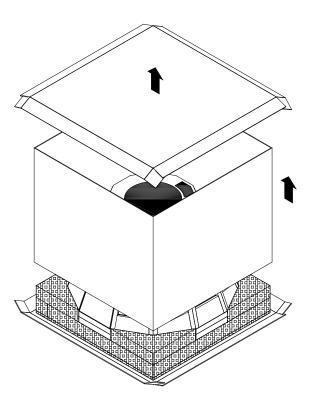


2. Remove (A1) by pulling the white line on product, as seen in the illustration below.

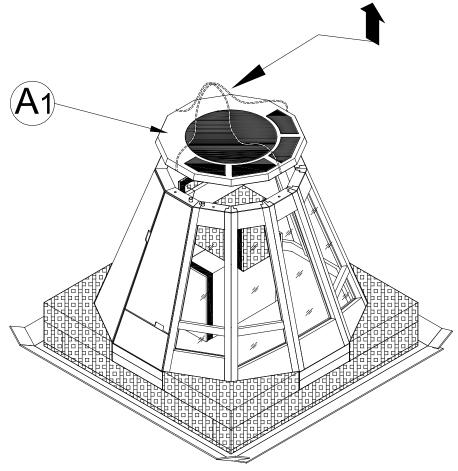

Date: 2015-Jun.-18


Rev:

3. Remove (A3) vertically, as seen in the illustration below.

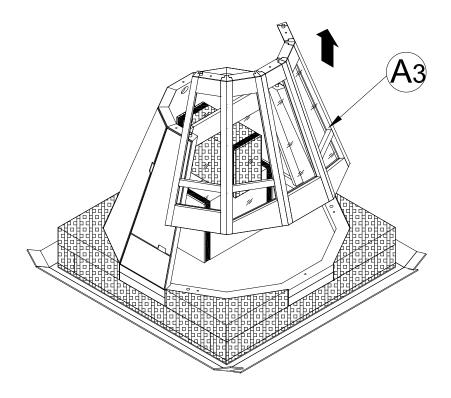

4. Remove inner box, Styrofoam, (A2) and (A4), as seen in the illustration below.


Note: Keep this Styrofoam for later use on the whole bed assembling.

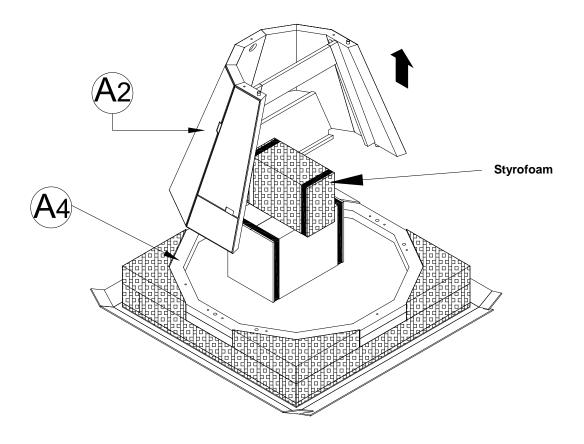


Date: 2015-Jun.-18

Rev:

5. Attach (A2) to (A1), with the wooden dowels and pre-drilled holes aligned, as seen in the illustration below.

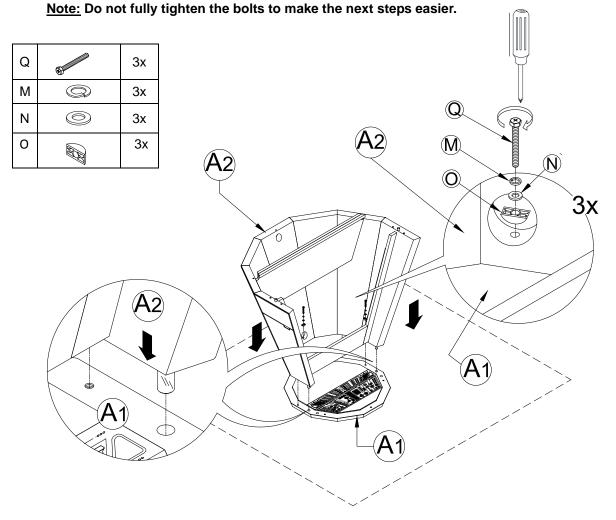


6. Attach (A3) to (A1&A2), with the wooden dowels and pre-drilled holes aligned, as seen in the illustration below. **Note:** Do not fully tighten the bolts to make the next steps easier.

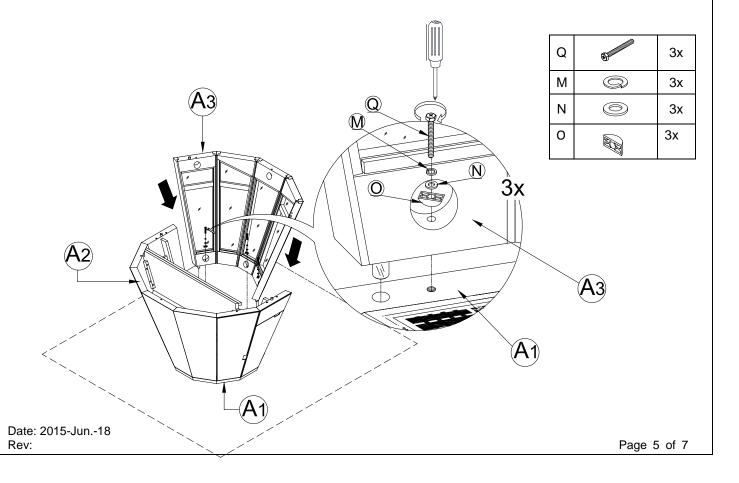

7. Attach (A4) to (A3&A2), with the pre-drilled holes aligned, as seen in the illustration below. <u>Pay attention to the label on (A4) for correct direction.</u>


Note: Do not fully tighten the bolts to make the next steps easier.

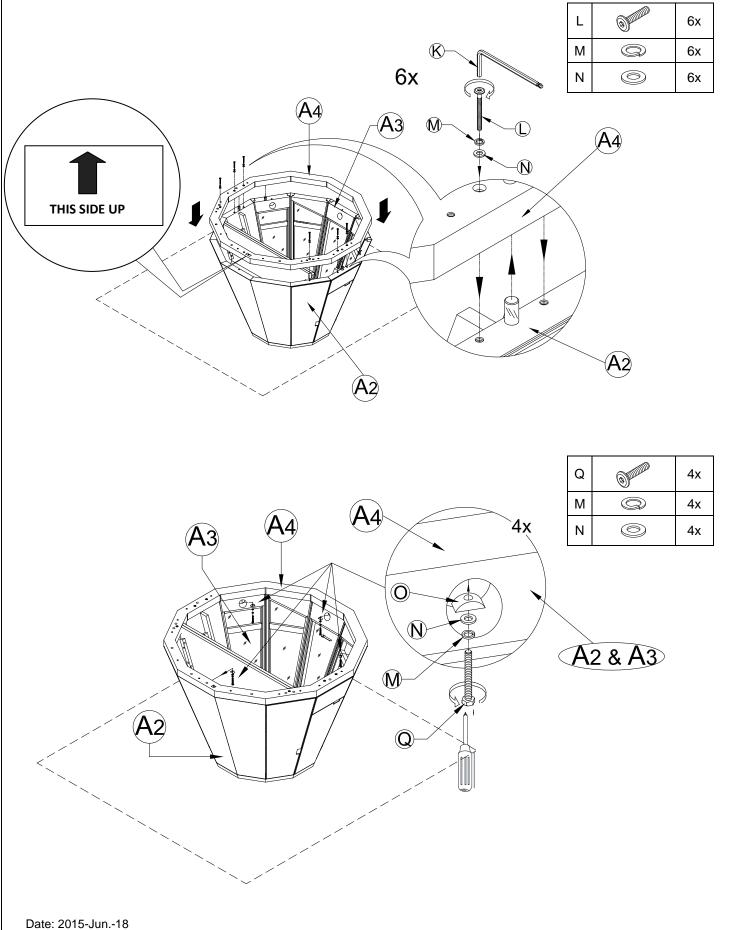


Date: 2015-Jun.-18 Rev:

Page 6 of 7

8. Check alignment and **fully tighten** all bolts again by wrench (P) and Allen Key (K).

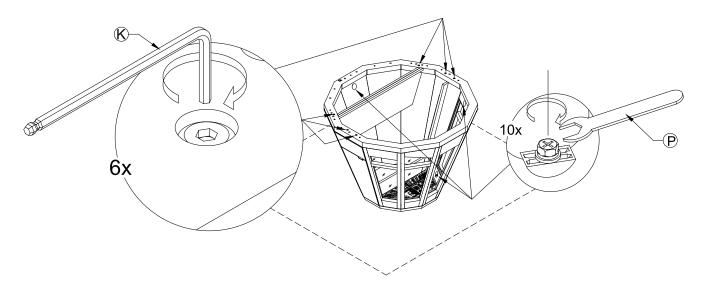

9. Footboard assembly is done. Pls refer to separated AI in another carton for the whole bed assembly.

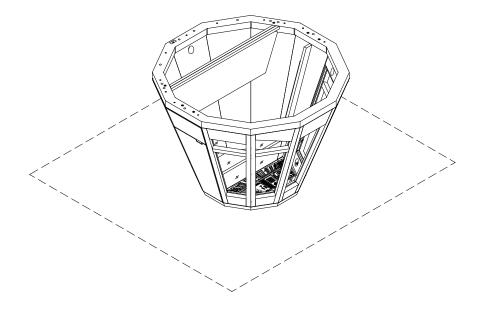

## **Care Instructions:**

- Dust often using a clean, soft, dry, and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight.
   Re-tighten if necessary.

Thank you for your purchase Stores | catalog | www.potterybarnkids.com USA 1.800.290.8181

Date: 2015-Jun.-18

Rev: Page 7 of 7