
pottery barn kids Speedboat twin bed trundle

PRE-ASSEMBLY:


- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this
 will avoid damaging parts during assembly. The shipping box provides an ideal work surface. Do not dispose of
 any contents until assembly is completed to avoid accidentally discarding small parts or hardware.
- Two adults recommended for ease of assembly.
- Use the parts and hardware lists to identify and separate each of the pieces included prior to starting assembly.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.
- If using power tools to aid in assembly please use caution. Power tools can damage hardware or split wood.

PARTS INCLUDED:


(A) Long siderail w/predrilled holes - 2pcs

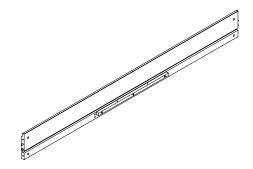


(B) Short siderail - 2pcs

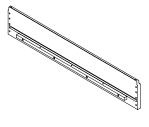

- (C) Side bottom board with protruding edge 2pcs
- (D) Middle bottom board with sunken edge 1pc

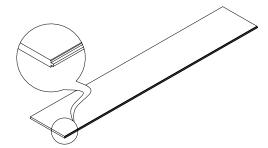

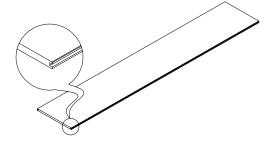

(E) Wooden bottom board support - 2pcs



HARDWARE ENCLOSED:

- (F) Large Phillips head screw 8x38mm 12pcs
- (G) Allen Key 1pc





- (H) Long bolt 1/4"x2-1/2"x13.5mm 8pcs
- (I) Barrel nut 1/4"x15x9.5mm 8pcs





- (J) Small Phillips head screw 8x25mm 10pcs
- (K) Pan head screw 8x17mm 24pcs





(L) Caster 50x50x65mm - 6pcs

(M) Trundle handles - 4pcs





- (N) Flat head screw 5/32" x 28mm 8pcs
- **4**

TOOLS REQUIRED:


Phillips screw driver (not included)




ASSEMBLY INSTRUCTIONS:

1. Slot the Middle bottom board (D) into the (2) Side bottom boards (C). Attach the Wooden bottom board supports (E) to middle bottom board (D) and Side bottom board (C) to the assembly as shown using (12) Large Phillips head screws (F). (Fig. 1)




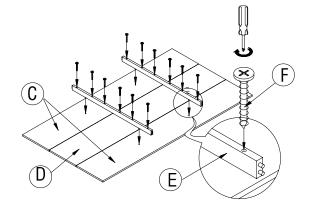


2. Attach the Long side rail with predrilled holes (A) to Short siderail (B) using Long bolt (H) and Barrel nut (I).Repeat Step 2 with the remaining Short side rail (B) and Long side rail with predrilled holes (A). (Fig. 2)

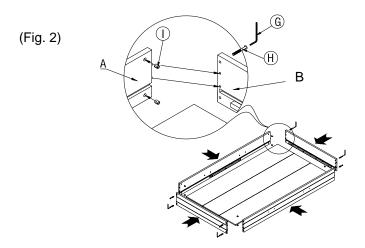

- 3. Tighten (10) Small Phillips head screws (J) to the assembly as shown. (Fig. 3)
- 4. Fasten each of the (6) Casters (L) to the bottom corners of the bottom of the assembly with the Pan head screws (K), using the pre-drilled holes as guides. (Fig. 3).

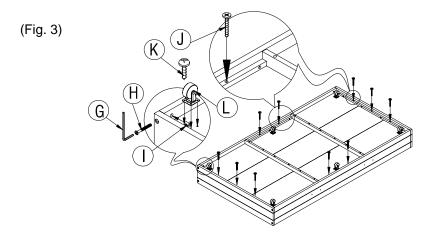

5. Fasten the Trundle Handles (M) to the trundle using Flat Head Screws (N). (Fig. 4)

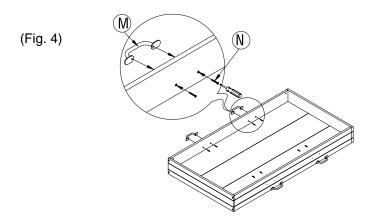

CARE INSTRUCTIONS:

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.
- Do not stand in the trundle.

Thank you for your purchase stores | catalog | www.potterybarnkids.com USA 1.800.290.8181


pottery barn kids SPEEDBOAT FULL BED TRUNDLE

PRE-ASSEMBLY:


- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface. Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts or hardware.
- Two adults recommended for ease of assembly.
- Use the parts and hardware lists to identify and separate each of the pieces included prior to starting assembly.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.
- If using power tools to aid in assembly please use caution. Power tools can damage hardware or split wood.


PARTS INCLUDED:

(A) Long siderail w/o predrilled holes – 1pc









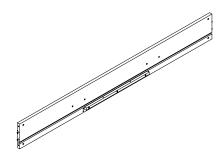

(C) Short siderail - 2pcs




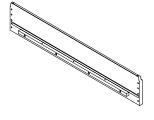

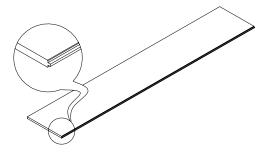

(E) Middle bottom board with sunken edge – 1pc

(F) Wooden bottom board support - 2pcs

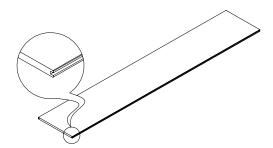



HARDWARE ENCLOSED:

- (G) Large Phillips head screw 8x38mm 12pcs
- (H) Allen Key 1pc





- (I) Long bolt 1/4"x2-1/2"x13.5mm 8pcs
- (J) Barrel nut 1/4"x15x9.5mm 8pcs





- (K) Small Phillips head screw 8x25mm 10pcs
- (L) Pan head screw 8x17mm 24pcs





(M) Caster 50x50x65mm - 6pcs

(N) Trundle handles - 2pcs





- (O) Flat head screw 5/32" x 28mm 4pcs
- **3**

TOOLS REQUIRED:


Phillips screw driver (not included)




ASSEMBLY INSTRUCTIONS:

Slot the Middle bottom board (E) into the (2) Side bottom boards (D). Attach the Wooden bottom board supports
(F) to middle bottom board (E) and Side bottom board (D) to the assembly as shown using (12) Large Phillips head screws (G). (Fig. 1)




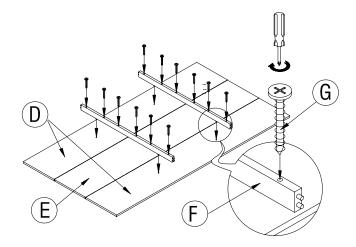


2. Attach the Long siderail w/o predrilled holes (A) to Short siderail (C) using Long bolt (I) and Barrel nut (J).Repeat Step 2 with the remaining Short side rail (C) and Long side rail with predrilled holes (B). (Fig. 2)

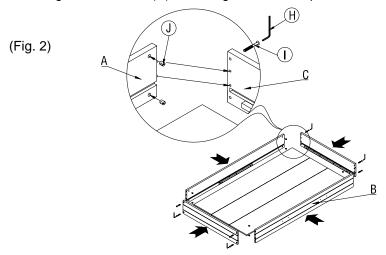

- 3. Tighten (10) Small Phillips head screws (K) to the assembly as shown. (Fig. 3)
- 4. Fasten each of the (6) Casters (M) to the bottom corners of the bottom of the assembly with the Pan head screws (L), using the pre-drilled holes as guides. (Fig. 3).

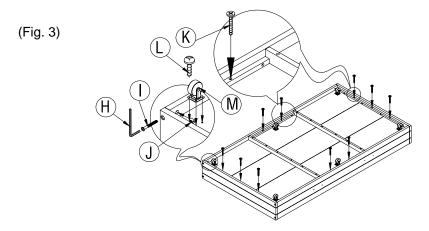

5. Fasten the Trundle Handles (N) to the trundle using Flat Head Screws (O). (Fig. 4)

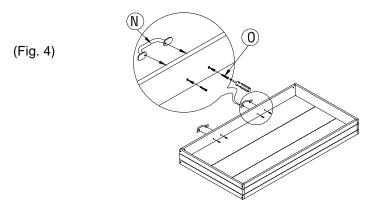

CARE INSTRUCTIONS:

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.
- Do not stand in the trundle.

Thank you for your purchase stores | catalog | www.potterybarnkids.com USA 1.800.290.8181